

Instructions for exchanging the seat.

1. Lift the chair and place the stool with the seat under on the table.
2. Unscrew the screws, holding the protection cover.



3. Unscrew the screws, holding the seat.



4. Place the mechanism on the new seat.
5. Place the screws, holding the seat into the holes and tighten them.



6. Place the cover on the mechanism and tighten the screws.